



UNLOADING INSTRUCTIONS



UNLOADING STACKED (HORIZONTAL) PALLETS



Unloading the pallet:

Insert the forklift into one side of the pallet



Place wooden supports under the pallet as the pallet is pulled out.

Ensure that the fork is inserted as far as possible.



Pull the pallet carefully out of the container. The forks should be pushed carefully as far in as possible underneath the pallet.

Note: avoid damaging the side of the box when inserting the forks.

Dragging the pallet back out of the container should be done very slowly so as not to damage the bearers.



The fork should be inserted into the long side of the pallet to pull it out and off the container.

Transporting the pallet should be done with the forks in the lowest possible position (low centre of gravity) to prevent swinging.



UNLOADING INSTRUCTIONS



UNLOADING AN UPRIGHT PALLET



Insert the forklift in one side of the pallet and slowly pull out of the container.




When an upright pallet is pulled out of the container, place the pallet carefully flat on the ground and ensure the pallet is not damaged.

Note the direction of the label arrows.



UNLOADING INSTRUCTIONS

NOTES

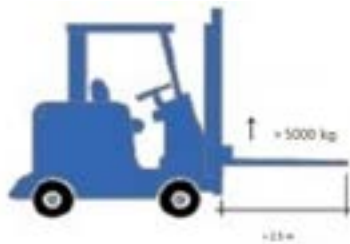

1. The load capacity of forklift should be more than 5000 kg.



2. The usable length of pallet fork should be more than 2.5 meters.



Stacking:

Maximum number of 100 sheet pallets: 6

NOTE

Lifting the sheets from the pallet should be carried out by three people; two people to hold the sheet at each end of the short sides while one person supports the sheet in the middle.